

## **S903 – Default Setting -Installer Guide**

### **Step to login 'MENU'**

Select '#' key for Enter.

1. Push button MENU, 'i'
2. Create supervisor ID : Default ID is 'empty'

## **Default setting guide for Installer**

### **1. Create Supervisor User & Password**

Choose 1.Supervisor -> 1. User -> 1.1 Add User -> Set ID user (eg: 1)

Then complete with below setting list,

1.1.1 Authorization -> (1- user)

- > Enroll finger print,
- > Set as alarm finger -> No
- > set 2.No (if enroll FP- 2 fingers)
- > Set Pin (compulsory to set a pinr)
- > Valid periods (just press button \* for escape)
- > Choice Group -> 2-No
- > Set priority -> 1 and enter (#)

### **2. Set Date & time**

Choose 1.System -> 1.3. Preference -> 1.3.3 Date & Time ( YYYY/MM/DD )

(e.g.: 1 – depend on user supervisor password ).

Choose Menu ->2. Options -> 2.1 System Opt -> 2..1.1 Date (eg: 2007/08/10).

Choose Menu ->2. Options -> 2.1 System Opt -> 2..1.2 Time ( HH : MM : SS )

(e.g.: 12:50:00)

### **3. Insert Node Number(Terminal ID)**

Choose 1.System -> 1.3. Preference -> 1.3.2 Communicate -> 1.3.2.1 Node number (default is '0')

(e.g.: 1 – depend on user ).

### **4. Insert Baud Rate**

Choose 1.System -> 1.3. Preference -> 1.3.2 Communicate -> 1.3.2.3 Baud Rate (default is '9600')

(Set Baud Rate: 115200).

### **5. Create New User**

Choose 1.System -> 1. User -> 1.1 Add User -> Set ID user (eg: 1002)


Then complete with below setting list,

1.1.1 Authorization -> (1-Normal user)


- > Enroll finger print,
- > Set as alarm finger -> No
- > Enroll finger print, proceed to 2<sup>nd</sup> finger if need for 2nd finger -> if no need press button \* for escape
- > Enroll finger print, proceed to 3<sup>rd</sup> finger if need for 3rd finger -> if no need press button \* for escape
- > Multi fingers Verification -> set 2.No (if enroll FP- 2 fingers) OR ->Set 1.-one (if enroll FP- 3 fingers)
- > Set Pin (if no need press button \* for escape)
- > Valid periods (just press button \* for escape)
- > Choice Group -> 2-No
- > Set priority -> 1 and enter (#)

## 6. Network Setting – Set Device IP

-> Open Xport Installer Software

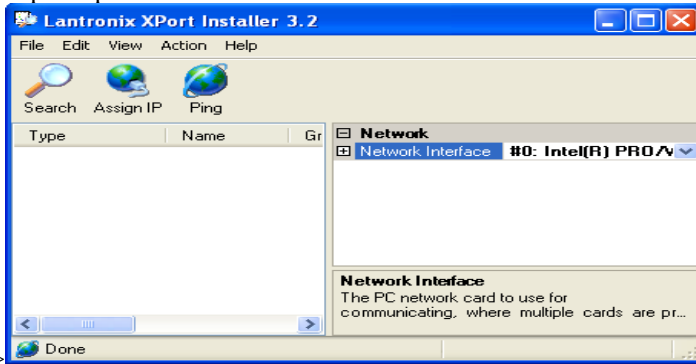

-> Click icon Search for check IP at devices

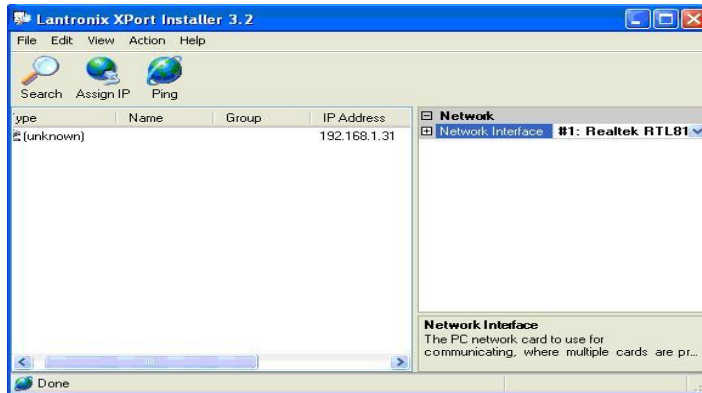

-> For Change New IP address

-> Select devices and click icon Assign IP

-> Write new IP address and click OK

